

1. Grindable waste

Only food waste, no large bones.

2. Waste which must not be ground

* Substances which can cause explosion, infection or chemical pollution.

* Non-grindable food waste

Sinews, long fish skins, vegetables with long fibres and similar.

3. Warning - Rotating disc

Rotating disc under disposer inlet. Do not insert hand.

4. Start / stop

* To start disposer and flush water, press **green** start button. If tap water is used, open this before starting the disposer.

* Feed food waste in an even and continuous manner.

* When grinding is completed, the disposer runs more silently. Wait 30 secs. . stop disposer with the **red** stop button. Thereafter turn off tap water if used.

5. Trouble shooting


a) The disposer reduces speed, stops or does not start. A humming sound is heard from motor

* Disconnect electrical supply (main switch, main fuses). Press and turn **red** stop button to fixed locked position.

* Use protective gloves. Remove any non-grindable object from grinding chamber.

Fit jam release wrench in the centre hole of the disposer bottom (see figure).

Rotate the wrench backwards and forwards until the shredder rotates freely in both directions.

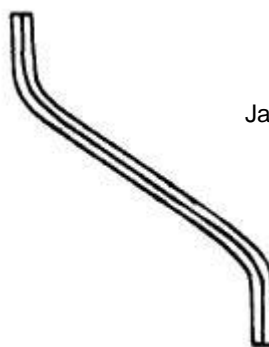

Jam release wrench

* Check fuses and replace. Reset the **red** stop button and connect main switch. Wait until automatic motor protector releases. Start disposer.

b) The disposer does not start and no sound is heard

* Is **red** stop button released? Turn anti-clockwise.

* Is motor protector reset? Press button on disposer bottom.

* Is the cover guard (with switch) closed?

* Check main switch and fuses.

c) The disposer starts but flush water does not run

* Is a stop valve open?

* Is the line strainer clogged? Turn off water supply, open filter and clean.

* Is a clicking sound heard when activating solenoid valve? If not change coil.

* Is your installation made for the use of tap water?

If fault cannot be remedied contact authorised service personnel or Disperator AB / local representative.