

metos


MOTOR-POWERED TURN TRACK WD-C90 & WD-C180

(translation of the original documentation)



Read the manual before using the machine!

Installation and user manual

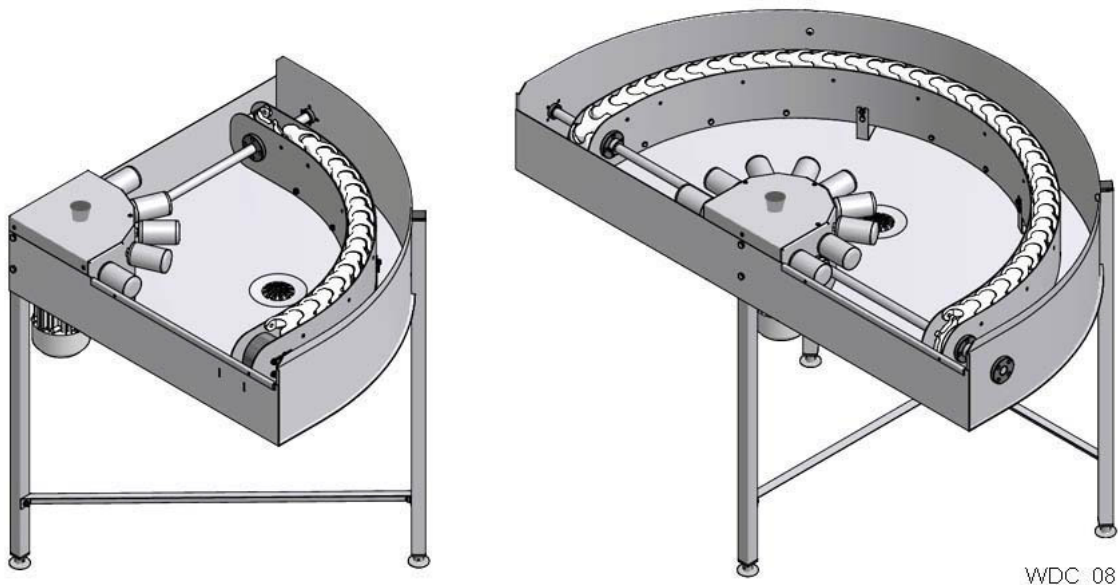

WDC_08

1. General instructions	1
1.1 Symbols used	2
1.2 Machine rating	3
1.3 Checking that the machine and manual correspond	3
1.4 EU Declaration of Conformity	4
 2. Safety instructions	 5
2.1 General information	5
2.2 Transport	6
2.3 Installation	6
2.4 Operation	7
2.4.1 High temperatures	7
2.4.2 Risk of crushing	7
2.4.3 Risk of slipping	7
2.4.4 Sounds	7
2.5 Cleaning the machine	7
 3. Installation	 8
3.1 General information	8
3.2 Requirements for the installation site	8
3.2.1 Lighting	8
3.2.2 Power supply	8
3.2.3 Drain/waste pipe	9
3.2.4 Space for servicing	9
3.3 Transport and storage	9
3.3.1 Unpacking	9
3.3.2 Fitting the legs to a WD-C90	10
3.3.3 Recycling	11
3.4 Installation	12
3.4.1 Preparing for the installation	12
3.4.2 Positioning the machine	12
3.5 Connections	13
3.5.1 Electrical connection	14
3.5.2 Drain/waste pipe	16
3.6 Trial operation	17
3.6.1 Start-up schedule	17
3.7 Technical documentation	17

4. Instructions for use	18
4.1 Preparations	18
4.2 Using the machine	19
4.2.1 Emergency stop	20
4.3 After use – Cleaning	21
4.3.1 Incorrect cleaning methods	21
4.3.2 Daily cleaning	21
4.3.3 Operating problems	22
5. Technical specifications	23

1. General instructions

Read the instructions in this manual carefully as they contain important information regarding the correct, effective and safe installation, use and servicing of the machine. Service personnel should have access to all documentation for the machine.

Keep this manual in a safe place so that it can and should be used by other operators of the machine.



- The product is intended to be used together with dishwashers for washing dishware that is found in the general catering and restaurant trade.
- The product can be equipped with a number of different options. Certain options may be standard in a number of countries. Check what your machine is equipped with.
- The capacity requirements of the machine can be found in the TECHNICAL DATA chapter.
- The electronics in the machine are RoHS compatible.

Before the machine is started up and used, the following points should be observed:



- The SAFETY INSTRUCTIONS chapter must be studied carefully before commissioning the machine.
- Installation of the machine must be performed in accordance with the requirements and instructions indicated in the INSTALLATION INSTRUCTIONS and TECHNICAL SPECIFICATIONS chapters.
- Any personnel who may at some point use the machine must be trained in its operation, use and care.
- The machine should not be used by anyone suffering from a physical or mental illness.
- A close eye should be kept on any children in the vicinity of the machine to ensure they do not tamper with it.
- All cover plates must be installed during use.



The machine and equipment requires an annual service. Contact one of our authorised and trained service companies for such a service.

General instructions

1.1 Symbols used



This symbol warns of situations where a safety risk may arise. The instructions given should be followed in order to prevent injury and dangerous situations.



This symbol on a machine part warns of electrical equipment. The machine must be entirely non-live during servicing, turn off the power at the power switch and if required, the switch should be locked to prevent unintentional operation. The component may only be removed by a qualified electrician.



This symbol warns that the machine's electronics are sensitive to electrostatic discharge (ESD), which is why a static electricity wristband must be used when handling the electronics at all times.



This symbol explains the right way to perform a task in order to prevent poor results and/or damage to the machine.



This symbol identifies recommendations and hints to help you get the best results when washing, to increase the machine's lifespan and reduce the risk of emergency shutdown.



This symbol explains the importance of careful and regular cleaning of the machine to meet hygiene requirements.



This symbol warns of the importance to read the manual before using the machine.



This symbol warns that local regulations must be followed for recycling of packaging etc. as well as the destruction of the machine.




This symbol shows where any earth cable for potential equalisation can be connected. The earth bolt is placed on the machine's stand.

General instructions

1.2 Machine rating

The following data is provided by various rating fields on the turn track's rating plate:

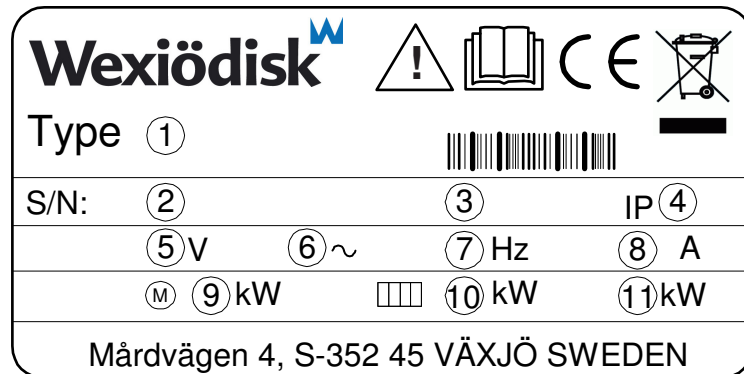

marks_15

1. Machine type
2. Machine serial number
3. Year of manufacture
4. Enclosure protection class
5. Voltage
6. Number of phases with or without neutral
7. Frequency
8. Main fuse
9. Motor output
10. Electrical heating output
11. Max. output

1.3 Checking that the machine and manual correspond

Check that the type description on the rating plate corresponds with the type description on manual cover page. If manuals are missing, it is possible to order new ones from the manufacturer or the local distributor. When ordering new manuals, it is important to quote the machine number found on the rating plate.

A so-called EU Declaration of Conformity is provided on delivery of the machine.

1. Contact details of the manufacturer (Wexiödisk AB, Mårdvägen 4, SE-35245 Växjö, SWEDEN, Tel.: +46 470 771200, Fax: +46 470 23752, E-mail: wexiodisk@wexiodisk.com).
2. Representatives of Wexiödisk AB.
3. Person responsible for the product's documentation.
4. Year of manufacture of the product.
5. The EU Directives with applicable provisions to which all the machines, special machines and accessories comply.
6. Harmonised standards for the Directives specified, and which the machines, special machines and accessories meet, wherever relevant.
7. Model designation and serial number of the machines, special machines and accessories the document applies to.
8. Place and date with signature and name (in block letters) of the person responsible for ensuring compliance with legislation and regulations.

2. Safety instructions



Read the chapter GENERAL INSTRUCTIONS carefully before starting work.

2.1 General information



The machine is CE marked, which means that it complies with the requirements of the EU Machinery Directive with regard to product safety. Product safety means that the design of the machine will prevent personal injury or damage to property. The CE mark is only valid for an unmodified machine. Any damage to the machine arising from failure to follow the instructions will invalidate the supplier's warranty and product liability.



Installation, repairs and servicing must be performed by an authorised engineer in accordance with local and national rules in effect for such work with water and drainage systems, electricity, ventilation and steam. We recommend that the work is performed by the manufacturer or one of the manufacturer's authorised service companies.

To further improve safety during installation, operation and servicing, the operator and the personnel responsible for installing and servicing the machine should read the safety instructions carefully.



The machine's electronics are sensitive to electrostatic discharge (ESD), which is why a static electricity wristband must be used when handling the electronics at all times.

Before the machine enters service, ensure that the personnel are given the necessary training in handling and looking after the machine.

Safety instructions



In order to avoid dangerous situations, the following must be followed:

- Switch off the machine immediately in the event of failure or malfunction.
- Make sure the machine is non-live before removing the cover plate. Turn off the power using the power switch. If required, the switch must be locked to prevent unintentional operation.
- Shut off the tap for incoming water and drain the machine's tank(s) before starting work. Let the machine cool down as pipes for water, washing pumps, booster heaters and valves become very hot when the machine is in operation.
- The machine and equipment requires an annual service. The machine should be serviced by a person authorised or trained to do so by us. Use original spare parts.
- Warranty repairs must be performed by an authorised company. Contact an authorised service company to draw up a programme of preventive care and maintenance. For authorised service companies, please see www.wexiodisk.com or contact Wexiödisk AB.
- The regular checks described in the manual must be carried out in accordance with the instructions.

2.2 Transport



Handle the machine with care during unloading and transport; there is a risk of it tipping over. Never lift or move the machine without using the wooden packaging to support the stand.

2.3 Installation



- The machine is designed for quick electrical installation.
- The machine must be connected to a lockable main switch.
- Make sure that the mains voltage is the same as that indicated on the machine's rating plate.



For increased safety, it is recommended to equip the installation with a ground fault circuit interrupter.

2.4 Operation



Be very careful around the machine when it is in operation.

2.4.1 High temperatures



- The temperature of the washing and rinsing water is 60°C and 85°C. Do not open the machine until the rinsing phase has finished. The steam that comes out of the machine after the wash has been completed is hot.
- Avoid touching hot pipes and booster heaters. The machine's outer jacket can also become hot during operation.

2.4.2 Risk of crushing



Avoid contact with the turn track's conveyor during operation, as the movement of the conveyor may result in crushing injuries.

2.4.3 Risk of slipping



The floor should be kept clean and dry to eliminate any risk of slipping. Mop up any water and leftover food that has been spilt.

2.4.4 Sounds



The machine is not silent during operation, see TECHNICAL SPECIFICATIONS. Hearing protection may therefore need to be used.

2.5 Cleaning the machine



When using a high-pressure washer or hose, do not aim the jet towards the turn track's drive motor. In order to satisfy current requirements, electrical components of approved IP classes are used in motor-powered turn tracks. No enclosure class is designed to withstand high pressure.

3. Installation



Read the chapters GENERAL INSTRUCTIONS and SAFETY INSTRUCTIONS carefully before starting work.

3.1 General information



Read these instructions carefully, as they contain important information regarding the correct installation method.



- The instructions should be used together with the dishwasher's wiring diagram. These can be found in the machine's electrical cabinet.
- The machine can be equipped with a number of different options. Certain options may be standard in a number of countries. Check what your machine is equipped with.
- If holes need to be drilled in the machine, the holes must be fitted with an edge strip or similar protection.

3.2 Requirements for the installation site

The requirements for installation of the product are the same as for the dishwasher to which it is connected. (See also the dishwasher's installation and user manual.)

3.2.1 Lighting

In order to ensure the best possible working conditions during installation, operation, servicing and maintenance, make sure that the machine is installed in a well-lit room.

3.2.2 Power supply

Power supply connections are made by qualified personnel in a way that complies with local and national regulations. The machine's capacity requirements are stipulated in TECHNICAL SPECIFICATIONS.

Installation

3.2.3 Drain/waste pipe

There must be a waste pipe with an effective trap for the machine's waste water and for water used for rinse cleaning. The machine's capacity requirements for drainage are stipulated in TECHNICAL SPECIFICATIONS.

3.2.4 Space for servicing


A 1-metre area should be left clear in front of the machine for servicing purposes. Depending on if the machine has different accessories, there may also be such a requirement at the infeed and outfeed ends as well as above the machine.

3.3 Transport and storage

Always transport the product in an upright position.



Take care during transport, as there is a risk of tipping. N.B.! The machine must not be transported without a pallet or other support. This may also result in damage. When transporting the machine without a normal wooden pallet, always check that none of the components underneath the machine can be damaged.

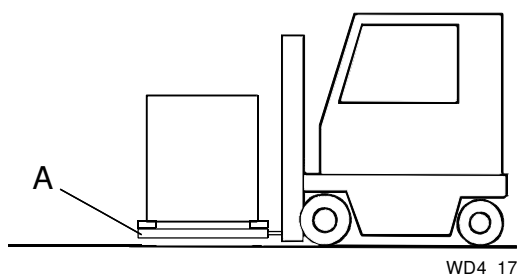

WD4_17

A=Wooden pallet



If the turn track is not to be installed immediately, it must be stored in a frost-free area where the air is dry.

3.3.1 Unpacking

Check that all parts have been delivered by comparing them with the delivery note.


Remove the packing material. Inspect the product for any transport damage.

Installation


3.3.2 Fitting the legs to a WD-C90

The package is supplied with two legs and one supporting strut dismantled. A short square tube is fitted to provide transport support. All screws are supplied. These are screwed into their respective legs or alternatively the transport support.

- Place the turn track upside-down on a flat surface and remove the transport support. This is held in place with two screws, washers and nuts.

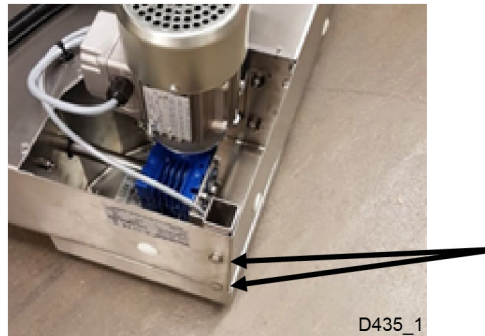

- Fit the leg in the place where the transport support was previously. Observe the heading of the screws on the leg. These must be used for fitting the supporting strut later.

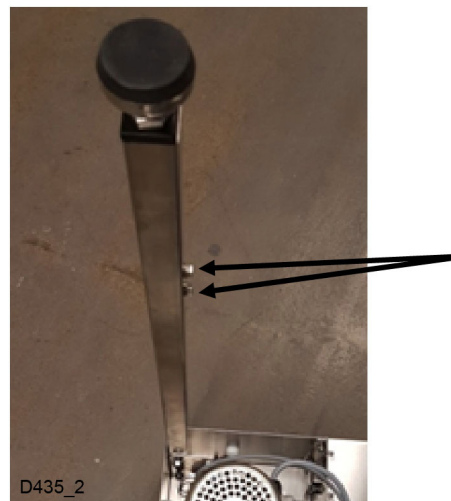


- Turn the WD-C90 onto its side.



Installation

- The second leg is mounted on the outside of the turn track and is screwed from the inside using two internal hex head screws.

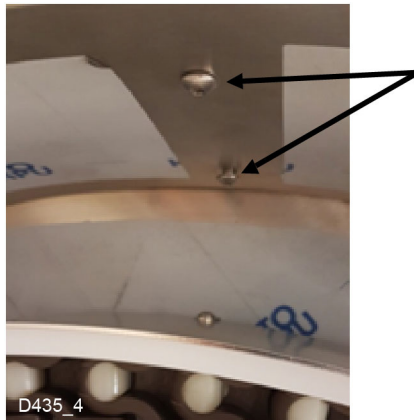

- Finally, the supporting strut is assembled with four screws.



The WD-C90 can now be connected to other machines.

3.3.3 Recycling

Packaging must be sent for destruction or recycling in accordance with local regulations.



The machine is manufactured from stainless steel plate, among other things, and also contains electronic components. Recycling of the appliance when its economic lifetime has been reached must be carried out in accordance with current rules and regulations.

3.4 Installation

3.4.1 Preparing for the installation

Check that there is sufficient room for the machine at the installation location.



- Check that correct connections are available for water, electricity, drainage and possibly steam at the installation location. See TECHNICAL SPECIFICATIONS.

3.4.2 Positioning the machine

Check the following points before the machine is placed in position:




- Check that the fuse for the machine at the site is off, blocked and that outgoing electrical circuits from the machine are non-live.
- Remove the protective plastic on the sides which are to be stood against a wall.

Place the machine in position and check that it, and any accessories, are horizontally level. Adjust the height with the legs.

3.5 Connections



- Connect the turn track and other peripheral equipment to the dishwasher in accordance with the dishwashing room's layout drawing.
- Check that the machine (ICS) that WD-C90 / WD-C180 is being connected to have the correct set point value (row 25) set for this option.

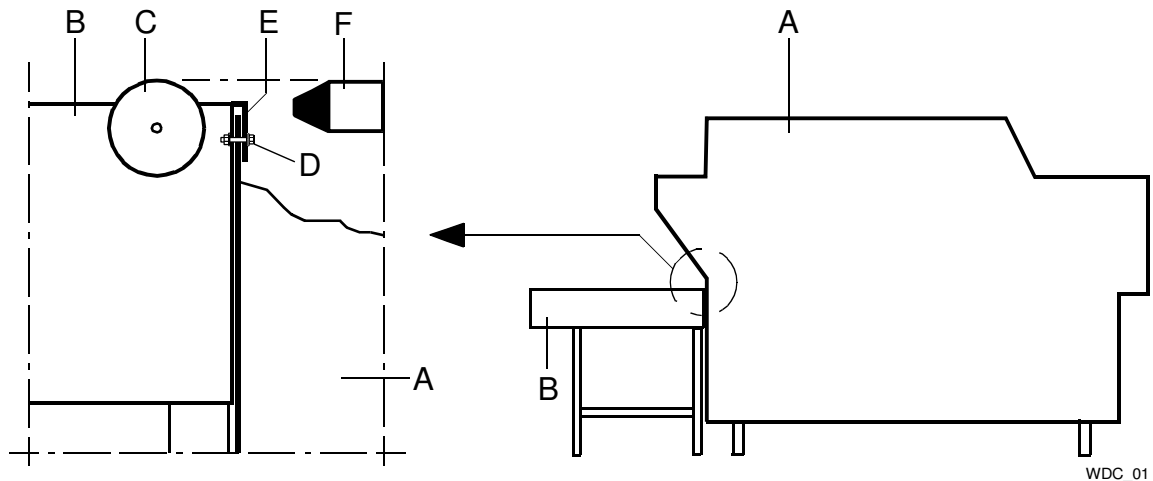

Connection of the track directly to the dishwasher's outfeed opening

A=Dishwasher

B=Track

C=Roller

D=Screw+washer+nuts

E=Cover strip

F=Dishwasher's loading cradle

- Firmly attach the turn track's cover strip (E) to the lower edge of the dishwasher's outfeed opening.
- Adjust the height using the turn track's legs. The turn track must be evenly balanced. The upper edge of the turn track's conveyor belt and rollers (C) must be level with the sliding surface of the machine's loading cradle (F) or be a few millimetres lower.
- Secure the turn track to the machine with screws using the existing holes at (D). Sometimes holes may need to be drilled in the lower edge of the outfeed opening, for example, if a drying zone is installed after the machine.

In the following chapter, figures are given in brackets to clarify what needs to be done. These letters refer to the image and list above.


Installation

3.5.1 Electrical connection

Information about electrical connections can be found on the dishwasher's wiring diagrams. The wiring diagrams are shown on the inside of the electrical cabinet door. Store the diagrams in the electrical cabinet after installation.

Cabling from the turn track


Depending on the position of the turn track, the electricity cable is drawn through an existing plugged hole at (A) on the dishwasher's outfeed side or at (C) on the infeed side. The electric cable is drawn through the cable duct behind the front panel (B) and on to the electrical cabinet (D).

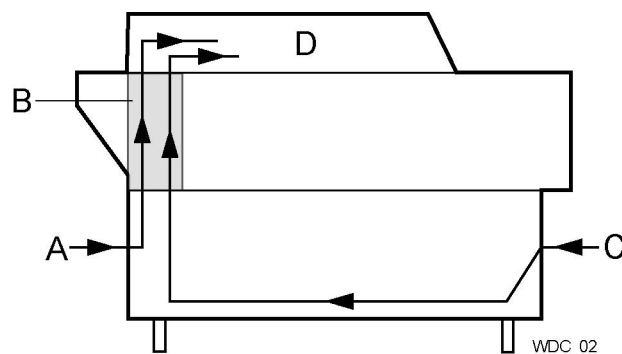

*Drawing of electricity cable from the turn track
A=Plugged hole, outfeed side,
B=Front panel,
C=Plugged hole, infeed side,
D=Electrical cabinet*

Cabling from limit switch and emergency stop

The cable from the limit switch on the connected roller table and the cable from the turn track's emergency stop are drawn through an existing hole at the end of the dishwasher and on to the terminal box located in the lower part of the dishwasher behind the front panels.

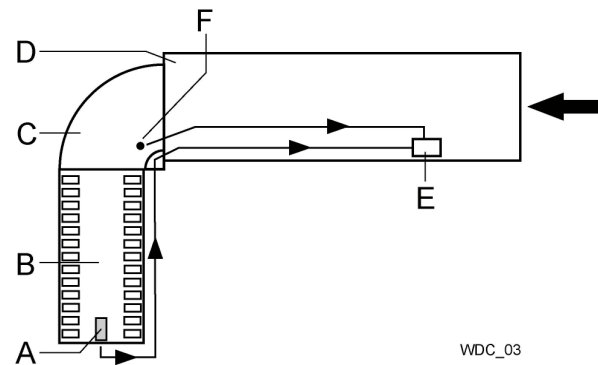

WDC_03

Connection of 90° track and roller table on the machine's outfeed side

A=Limit switch

B=Roller table

C=Track

D=Dishwasher



E=Terminal box

F=Emergency stop


Installation

3.5.2 Drain/waste pipe



Connect the drain at (1). The drain pipe can be connected to the dishwasher drain or run to a floor drain, where it must end above the water level. The drain should be a 50 mm metal pipe if there is a risk of mechanical collision.

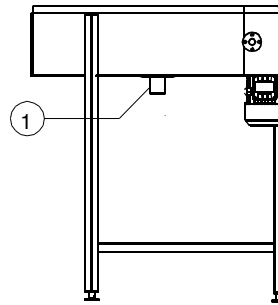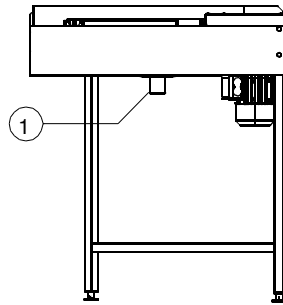


11298_r1

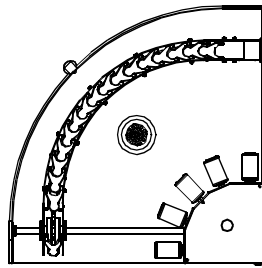

*Motor-powered turn track 90°
1=Drain connection 50 mm*

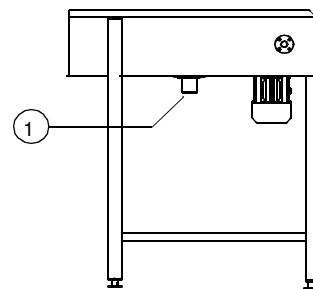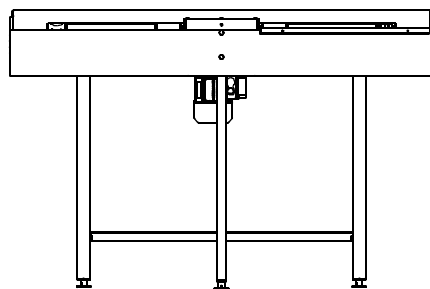

11299_r1

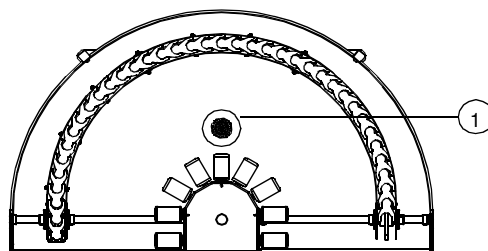

*Motor-powered turn track 180°
1=Drain connection 50 mm*

3.6 Trial operation

Test the turn track together with the dishwasher. Prepare the machine for a trial run by following the INSTRUCTIONS FOR USE in the user manuals for the machines. The instructions describe the measures that must be taken to prepare the machine for operation.

3.6.1 Start-up schedule

This should be completed when the machine is started up and used.

Machine type:
Machine serial number:
Installation date:

Read the installation and user manuals carefully. Then check the following points:

1. Check:

- The direction of rotation of the turn track/conveyor belt.
NB: If the feed is moving in the wrong direction, stop the machine immediately and switch over two of the phases for the turn track/conveyor's drive motor.
- The turn track/conveyor belt's tensioning must NOT be "loose"; remove one link if this is the case.
- Transport of baskets along the turn track.
- Limit switch function. When a basket activates the limit switch on a connected roller table, the turn track's conveyor belt and dishwasher should stop. When the basket is removed the equipment should restart automatically.
- When the emergency stop function is activated, the dishwasher will also stop.
- Drainage system integrity.

2. Train and inform personnel concerning:

- Washing
- Care (daily, weekly and other frequencies)
- Recommendation for annual service

3.7 Technical documentation

For correct use and servicing, it is essential that the documentation accompanying the equipment be made available to personnel who will be using it. The installation and user manual, which describes handling and care, among other things, should be stored near the equipment.

4. Instructions for use



Read the chapters GENERAL INSTRUCTIONS and SAFETY INSTRUCTIONS carefully before starting work.



This chapter describes what must be done with the machine:

- Prior to use
- Regarding the way in which the machine should be used
- Following use

The use of the machine is dependent on how the machine is equipped.


4.1 Preparations

Check:



- That the machine and removable parts have been cleaned. If not – clean them!
- That removable parts are correctly in place
- That the power switch is in the ON position

4.2 Using the machine

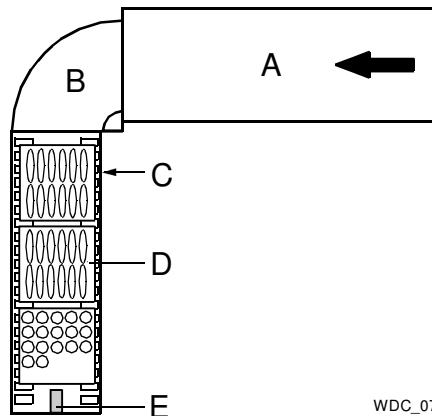

WDC_07

Example of installation. Dishwasher with 90° turn track and roller table



A=Dishwasher

B=Track

C=Roller table

D=Basket

E=Limit switch (the limit switch is activated by a basket and the equipment stops)

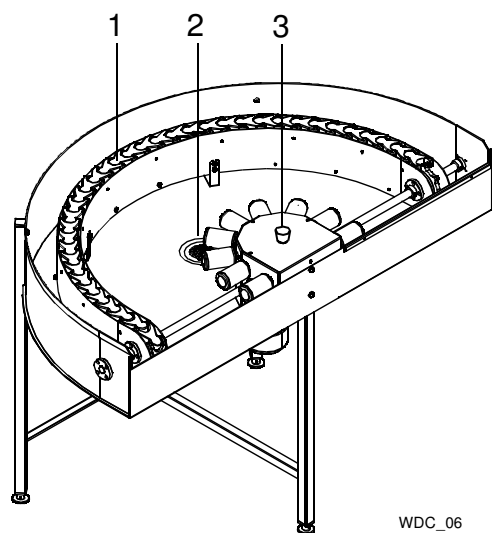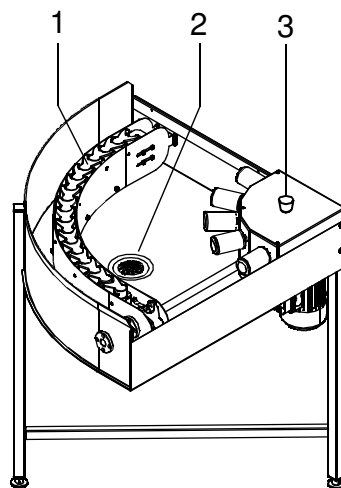

WDC_06

90° and 180° track

1=Conveyor belt

2=Drain filter

3=Emergency stop

Instructions for use

The motor-powered turn track is controlled from the dishwasher and is in operation when the dishwasher is feeding baskets through the machine.

When a basket of clean items leaves the machine, it is transported by the turn track to the connected roller table.

Once the roller table is full of baskets, the first basket will activate the roller table's limit switch. The dishwasher and the turn track's conveyor belt (1) stop.

Remove the baskets from the roller table. The dishwasher and turn track start automatically.

A motor-powered turn track can also be connected to the dishwasher's infeed opening and used for transporting baskets of dirty items into the machine.

The turn track must not be used as a storage area for rubbish or for storing other objects.

4.2.1 Emergency stop

If the turn track is stopped using the emergency stop (3), the dishwasher also stops.

If an emergency stop button is pressed during operation, the reason for the emergency stop must be rectified.

Reset the emergency stop by turning the knob in the direction of the arrows.

Restart the machine and turn track using the feed button on the dishwasher's control panel.

4.3 After use – Cleaning

HACCP


HACCP is a preventive inspection system which ensures that hygiene requirements are met during the washing process and cleaning of the equipment. As a result of its design, the turn track meets strict hygiene requirements. Regular, thorough cleaning is also important from a hygiene perspective. Equipment that is properly cleaned reduces the risk of dirt accumulating, increases the service life of the equipment and reduces the risk of urgent interruptions to operation.

4.3.1 Incorrect cleaning methods



NB: An incorrect cleaning method may damage the equipment. The following points must be observed:

- Do NOT use steel wool, as this will cause corrosion.
- If detergent is used, it must not contain abrasives. Detergents containing abrasives will damage the stainless steel panels.
- Pressure washers can damage the machine and must NOT be used for cleaning purposes. Never use a pressure washer to clean the floor within 1 metre of the machine. The supplier cannot be held liable for any faults caused by the use of pressure washers on the machine and any such use may invalidate the warranty. There is a risk of splashing even if the floor is hosed down.

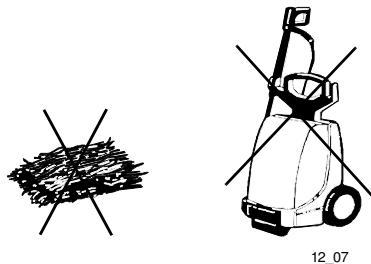

4.3.2 Daily cleaning



Before cleaning begins, the dishwasher must be switched off.

- Remove the drain filter (2) and clean it.
- Rinse the inside of the turn track (we recommend cleaning gun WD240.9009 for this).
- Replace the filter.
- Wipe the outside of the turn track with a soft, damp cloth.
- If detergent is used, it must not contain abrasives. Detergents containing abrasives will damage the stainless steel panels.
- The exterior of the machine must not be hosed. Water can enter the machine and damage the control panel and electrical equipment.

4.3.3 Operating problems

When you contact service personnel, you will need to provide the following information:

- The equipment's type description
- Machine serial number and installation date
- A brief description of the problem.
- What happened to cause the problem

5. Technical specifications

The manufacturer reserves the right to make changes to the technical data.

General data	WD-C90	WD-C180
Weight excl. packaging (kg)	37	54
Packaging weight (kg)	10	14
Basket size (mm)	500x500	500x500
Enclosure protection class (IP)	55	55

Electrical connection	WD-C90	WD-C180
Drive motor (kW)	0.12	0.12
Total connected power (kW)	0.12	0.12

Connections	WD-C90	WD-C180
Drain connection (mm)	50	50